




RAMSYS

ABPM 205L™

Alpha Beta Particulate Monitor

Sampling of air extracted from ventilation ducts or stacks.

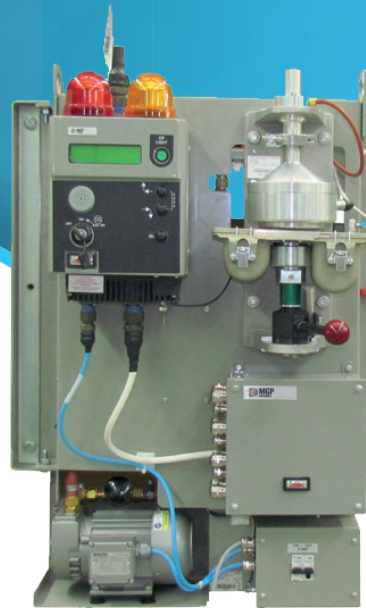

FEATURES

- Static and dynamic compensation of the radon and thoron solid progenies
- Dynamic gamma background compensation
- Natural and artificial alpha volumetric activity indication
- On-line spectrometry
- Up to 6 months filter cassette autonomy

DESCRIPTION

The ABPM 205L monitor forms part of the RAMSYS product line.

It has been developed to sample air extracted from ventilation ducts or stacks. A double silicon detector is associated with a radial fin grid that limits the scattering of the alpha particles. The compensation of the radon and thoron solid progenies is then processed by specific algorithms.

Operating costs are minimized by the autonomous operation through automatic filter advance management.

ABPM 205L | ALPHA BETA PARTICULATE MONITOR

PHYSICAL CHARACTERISTICS

- Radiation detected: alpha, beta and gamma
- Detector: dual large area silicon (PIPS)
- Filter type: FSLW
- Typical energy windows:
 - Alpha: 2 MeV to 10 MeV
 - Beta: 80 keV to 2.5 MeV
 - Gamma: 80 keV to 2.5 MeV
- Typical measurement range:
 - Alpha: 10^{-2} to $3.7 \cdot 10^{-6}$ Bq/m³ ($2.7 \cdot 10^{-13}$ to 10^{-4} μ Ci/cc)
 - Beta: 1 to $3.7 \cdot 10^{+6}$ Bq/m³ ($2.7 \cdot 10^{-11}$ to 10^{-4} μ Ci/cc)

ENVIRONMENTAL CHARACTERISTICS

- Normal temperature: +5°C to +40°C (+41°F to +104°F)
- Temperature limit: -5°C to +55°C (+23°F to +131°F)
- MTBF: > 20 000 hours, with preventive maintenance

PNEUMATIC CHARACTERISTICS

- Standard flow rate: 35 l/min (1.24 scfm)
- Pressure drop: 100 to 350 mbar (1.45 to 5.07 psi)

MECHANICAL CHARACTERISTICS

- Dimensions: 862 mm x 597 mm x 360 mm (33.9 in x 23.5 in x 14.2 in)
- Weight: ~ 45 kg (~ 99 lb)
- Color: gray RAL 7030
- Inlet tube connection: \varnothing 25.4 mm OD (1 in)
- Outlet tube connection: \varnothing 12 mm OD (1/2 in)

ELECTRICAL CHARACTERISTICS

- Power supply: 230 Vac – 50 Hz or 120 Vac – 60 Hz
- Data link outputs: 1 RS232 and 2 isolated RS485
- Alarm relays: 3 SPDT relays
- I/O: 2 isolated analog outputs and 1 isolated analog input (0/4-20 mA)

SIGNALING (Applicable to LPDU only)

- Alphanumeric display: measurement, status...
- Sound alarm: buzzer 90 dBA at 1 meter
- Visual alarm: 3 lights (red, yellow, green)

REFERENCE STANDARDS

- Nuclear: IEC60761
- EMC: 2014/30/EU and 2014/35/EU, IEC61000-6-2 and IEC61000-6-4

VERSIONS

- 230 Vac or 120 Vac
- Local processing and display unit (LPDU) or local processing unit (LPU)
- Pumping unit
- Monitor wall fixing plate
- Ethernet

ACCESSORIES

- Calibration tools
- Software: MASS2, RAMVISION, SIMS2...
- USB converters

Featuring:



www.mirion.com

Copyright © 2018 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.

DOC001913EN-D



MIRION
TECHNOLOGIES